

Your VirtuaTilt is **ready to play out of the box** — no PC needed to start. To pick a game, **hold its button while the cabinet powers on**; the centre LED lights in that game's colour (shown below). Release the button after a second; Bluetooth and the LED are ready within about 10 seconds.

1 Power off the cabinet.

2 Press & hold the button for the game you want.

3 Switch the cabinet on; release the button after a second.

4 Wait for the LED colour, then pair / launch on your Quest or PC.

BUTTON	LED COLOUR	GAME / HOST	PROFILE
1	 Amber	Visual Pinball X 10.8.x + DOF — PC (USB)	VTConfig-USB-VPX-10.8.X-DOF_v1.X.json
2	 Green	Pinball FX VR — Meta Quest (BT)	VTConfig-BT-FXVR_XAM_v1.X.json
3	 Red	Pinball VR Classics — Meta Quest (BT)	VTConfig-BT-PinballVRClassics_v1.X.json
4	 White	Star Wars Pinball VR — Meta Quest (BT)	VTConfig-BT-StarWarsPinballVR_v1.X.json
5	 Blue	Steam VP games — PC (BT)	VTConfig-BT-STEAM-XInput_v1.X.json
6	 Magenta	Zaccaria Pinball — PC (BT)	VTConfig-BT-STEAM-Zaccaria_v1.X.json
7	 Yellow	VPX / Future Pinball — PC (BT)	VTConfig-BT-VPX-FuturePinball_v1.X.json
8	 Cyan	Steam / XInput — PC (USB)	VTConfig-USB-STEAM-XInput_v1.X.json

DEFAULT If you **don't hold any button** at boot, the cabinet loads its **default profile** and the **centre LED stays off** — this is normal. Factory default = VTConfig-USB-VPX-10.8.X-DOF_v1.X.json (Visual Pinball X 10.8.x). The default is set in **GUIConfigTool** → **Configuration tab**; it is separate from the eight button slots above.

- LED colours shown are the factory defaults. You can re-assign any colour in **GUIConfigTool** → **Profiles tab** → **Slot LED Colors**.
- Only one profile is active at a time. To change which profile is on which button, use **GUIConfigTool** → **Profiles tab**.
- Pinball FX VR 1.10: slot 2 needs **VTConfig-BT-FXVR_XAM_v1.1 or later**. Upload it in the Profiles tab.
- Steam and Zaccaria (buttons 5, 6, 8): the **Center button is Start / Menu** (pause, leave the table) from **VTConfig-BT-STEAM-XInput_v1.3**, **VTConfig-BT-STEAM-Zaccaria_v1.4** and **VTConfig-USB-STEAM-XInput_v1.2**. Upload them in the Profiles tab.
- Firmware v8.0.18: hold joystick DOWN + a slot button for **3 seconds** to switch without powering off; DOWN alone for **5 seconds** loads the default. In console profiles, the Blue button resets first: choose its slot at power-on.